2006-08 ACCESSORIES AND EQUIPMENT

Seats - Civic GX

COMPONENT LOCATION INDEX

NOTE: Refer to the SEATS (EXCEPT HYBRID) article for additional information that is not shown in this article.

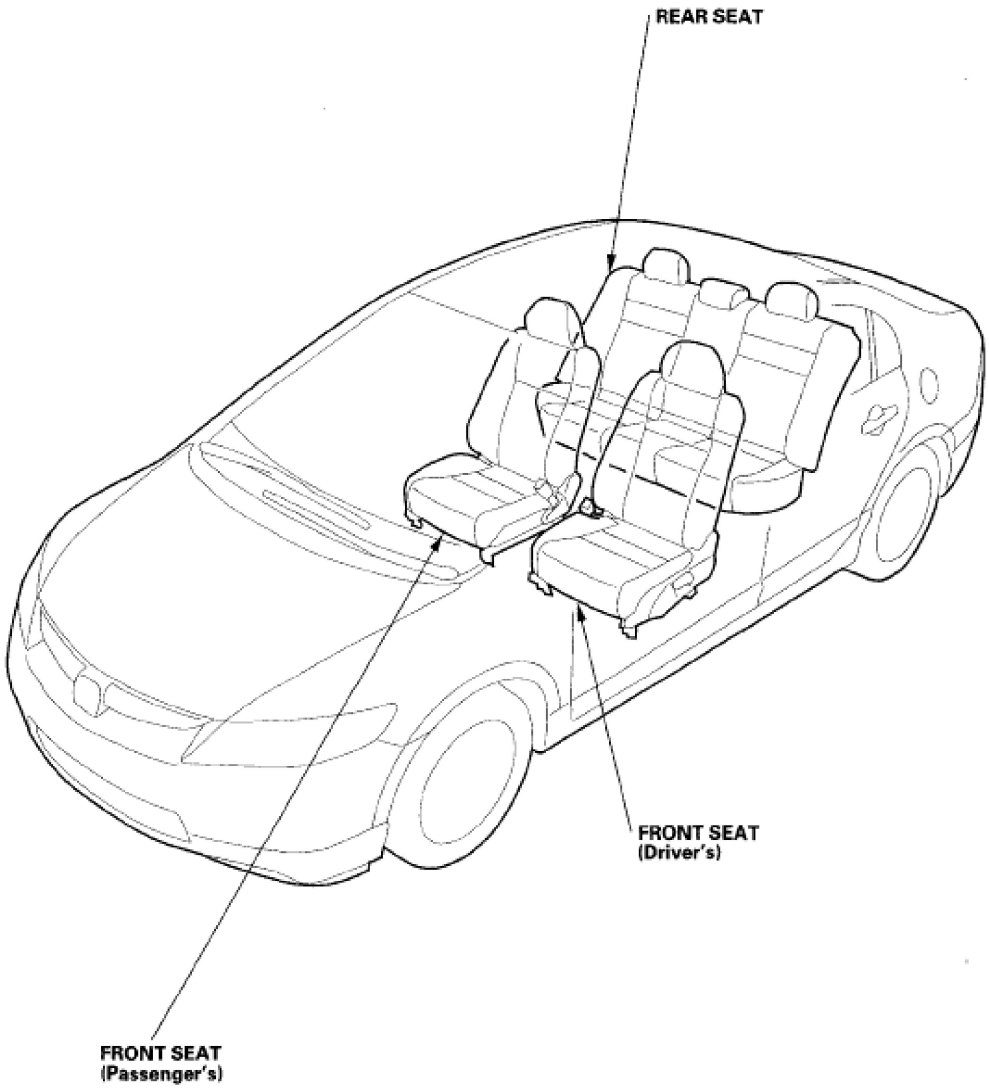

Fig. 1: Identifying Seats Component Location

REAR SEAT REMOVAL/INSTALLATION

NOTE: Take care not to scratch the body or tear the seat covers.

1. Remove the bolt between the seat-back (A) and the seat cushion (B).

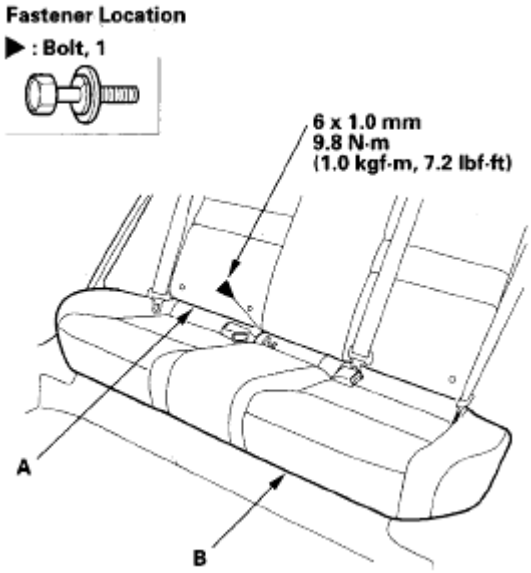

Fig. 2: Identifying Bolt Between Seat-Back And Seat Cushion

2. Pull each front edge of the seat cushion (A) up to release the hooks (B), then pull back the seat cushion, and remove it.

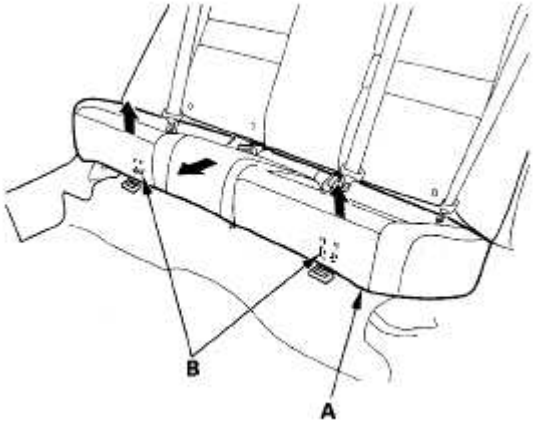

Fig. 3: Pulling Front Edge Of Seat Cushion To Release Hooks

3. Remove all of the head restraints.
4. Release the center seat belt (A) from the center belt guide (B).

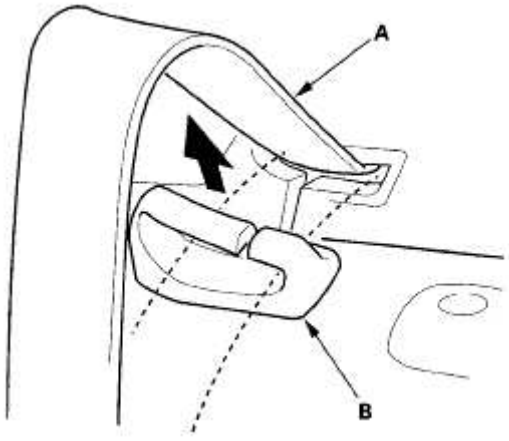

Fig. 4: Releasing Center Seat Belt From Center Belt Guide

5. Remove the bolts (A, B) securing the seat-back (C).

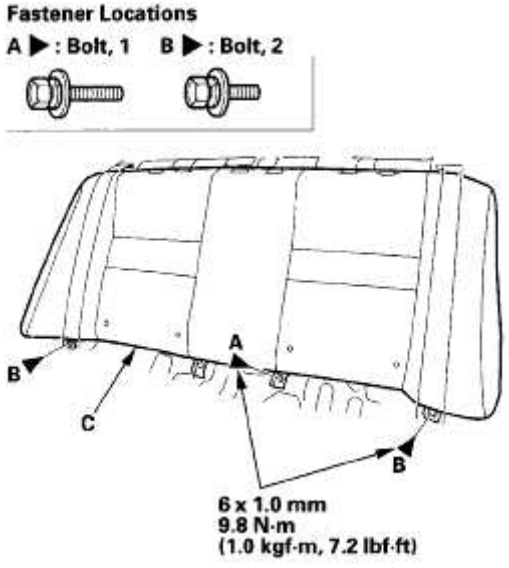

Fig. 5: Identifying Bolts Securing Seat-Back

6. Lift the seat-back (A) up to release the wire loops with collars (B) from the hooks (C) on the body, then remove the seat-back.

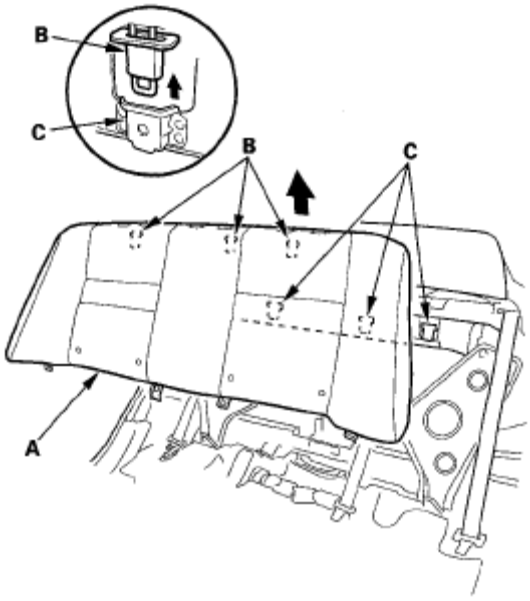

Fig. 6: Lifting Seat-Back Up To Release Wire Loops With Collars From Hooks On Body

7. Install the seat in the reverse order of removal, and note these items:
   - Guide the belts over the front of the seat-back as you install it.
   - Before attaching the rear seat-back and cushion, make sure there are no twists or kinks in the seat belts.
   - When installing the seat cushion, slip the seat belt buckles through the slits in the seat cushion.

REAR SEAT-BACK COVER REPLACEMENT

NOTE:
- **Put on gloves to protect your hands.**
- **Take care not to tear the seams or damage the seat covers.**

1. Remove the seat-back (see **REAR SEAT REMOVAL/INSTALLATION**).
2. Remove the screw, then remove the center belt guide (A).

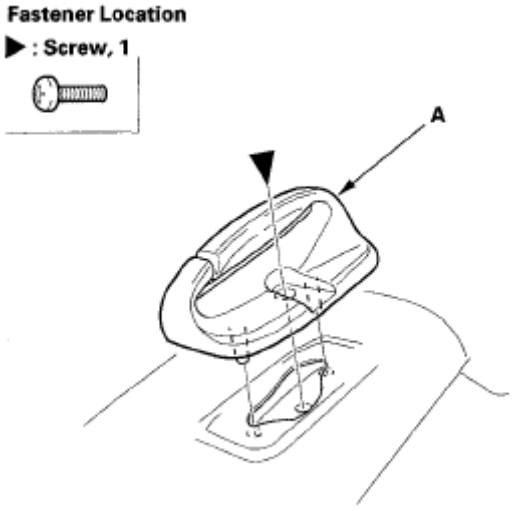

Fig. 7: Identifying Center Belt Guide

3. From the back of the seat-back, pass four retainers (A) through the slots in the seat-back pad, and release all the clips (B), and fold back the seat-back cover (C).

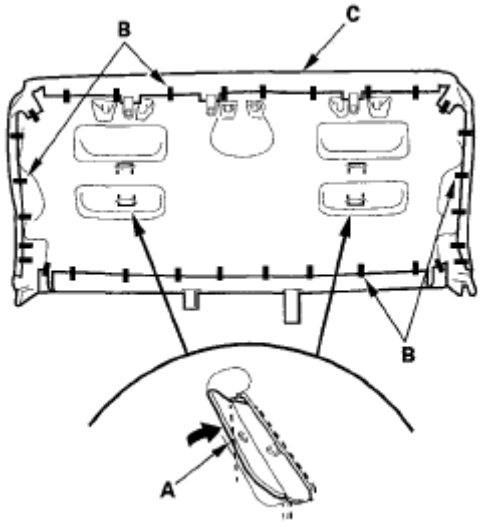

Fig. 8: Identifying Clips, And Fold Back Seat-Back Cover

4. Pull out the head restraint guides (A) while pinching the end of the guides, and remove them.

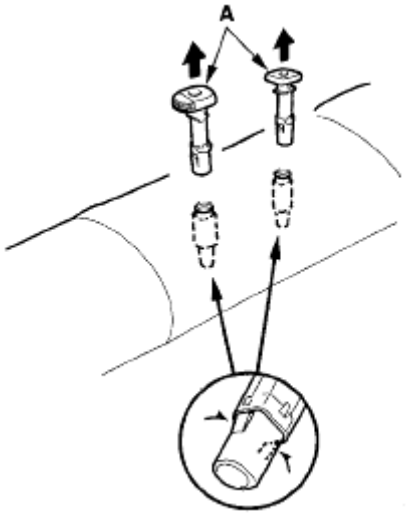

Fig. 9: Pulling Out Head Restraint Guides And Pinching End Of Guides

5. Pull back the edge of the seat-back cover (A) all the way around, release the clips (B), and release the hooks (C) of the horizontal wires (D) from the vertical wires (E) on the pad, then remove the seat-back cover.

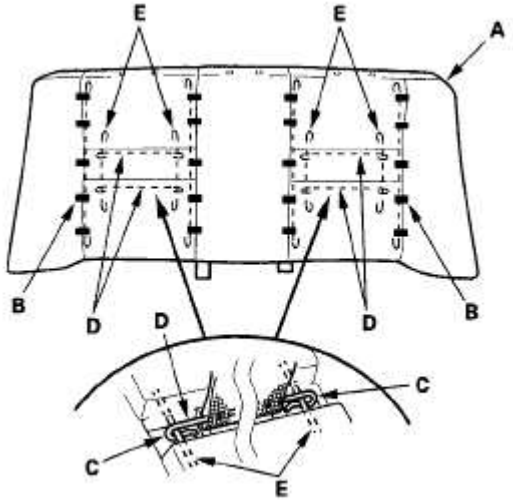

Fig. 10: Identifying Back Edge Of Seat-Back Cover

6. Install the cover in the reverse order of removal, and note these items:
   - To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips.
   - Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

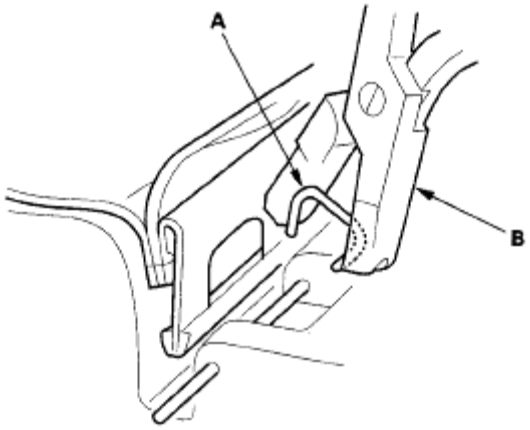

Fig. 11: Identifying Ring Pliers And Clips

REAR SEAT CUSHION COVER REPLACEMENT

NOTE:

- **Put on gloves to protect your hands.**
- **Take care not to tear the seams or damage the seat covers.**

1. Remove the seat cushion (see **REAR SEAT REMOVAL/INSTALLATION**).
2. From the back of the seat-back, pass both lower retainers (A) through the slots in the seat cushion pad, and release all the clips (B), and fold back the seat cushion cover.

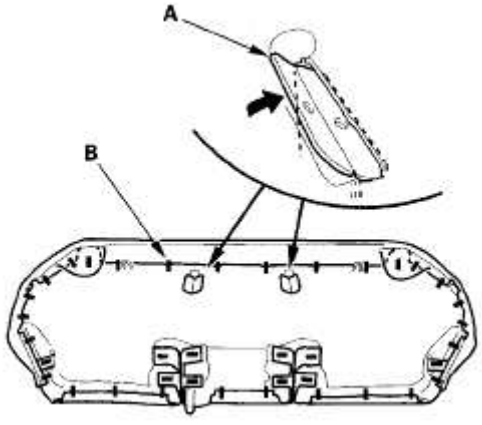

Fig. 12: Removing Seat Cushion

3. Pull back the edge of the seat cushion cover all the way around, and release the clips (A), from the seat cushion cover (B) through the hole in the seat cushion pad, then remove the seat cushion cover.

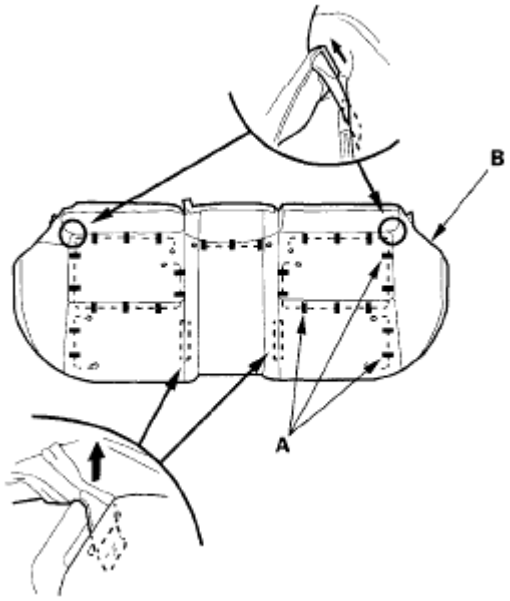

Fig. 13: Pulling Back Edge Of Seat Cushion Cover

4. Install the cover in the reverse order of removal, and note these items:
   - To prevent wrinkles when installing a seat cushion cover, make sure the material is stretched evenly over the pad before securing the clips.
   - Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

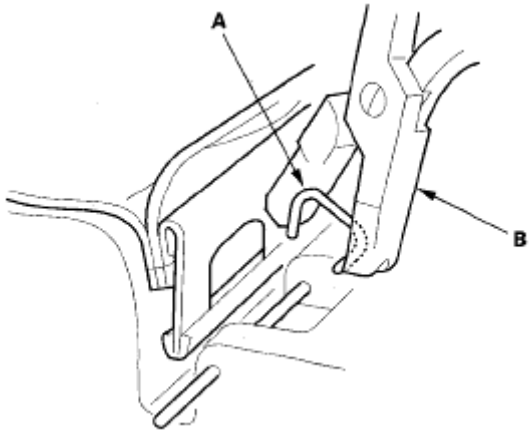

Fig. 14: Identifying Ring Pliers And Clips